

CALEX
H O L L A N D


VISTA

**PARTY LIGHTS
WITH FAIRY LIGHTS
12 METER**



User Manual

Art. No. 7402000300

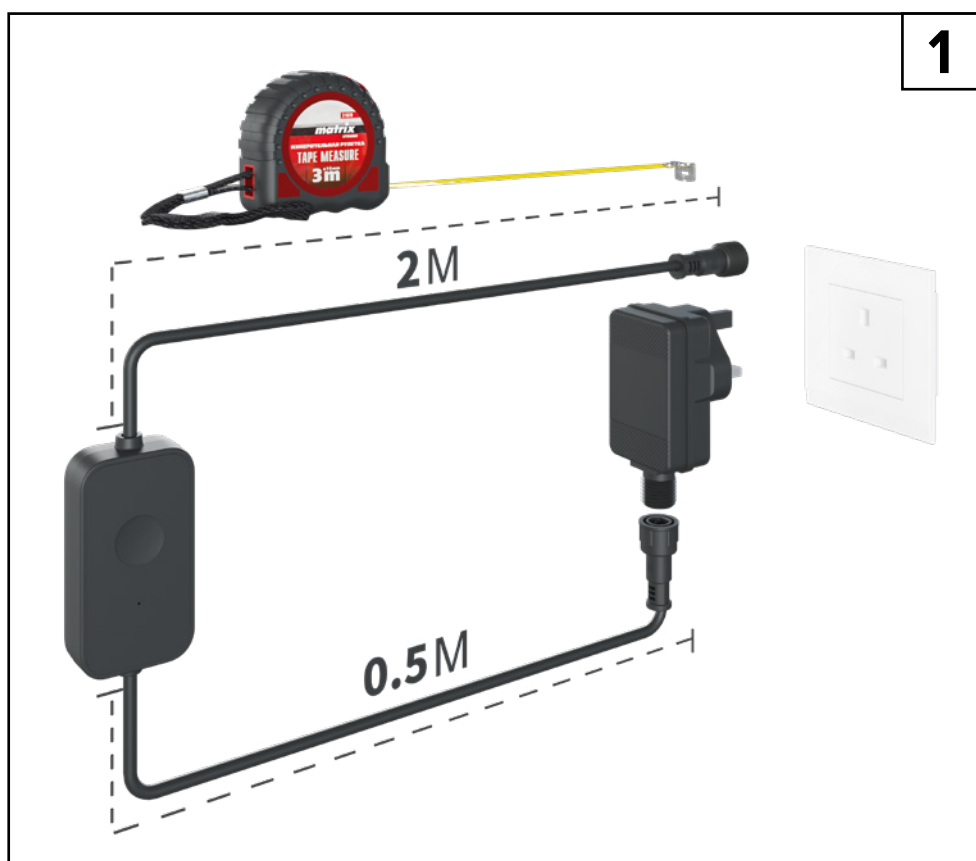

Electro Cirkel Retail B.V.
Lyonstraat 29
3047 AJ Rotterdam
The Netherlands

Calex Smart Home UK Ltd.
20 Gresham Street London
EC2V 7JE United Kingdom

WWW.CALEX.EU



Important: the LED bulbs in this luminaire can not be replaced.

Technical data

Input Volts	Output Volts	Overall Length	Light Color	Safety class	Max Wattage	Extendable
220~240 VAC	5 V DC	12.1 meter	RGBIC	II	10 W	N/A

General safety instructions

Use this product for the specified purpose and with the original power plug only. Do not cover. In case of any damage to this product, turn it off immediately. Never attempt to repair the product yourself.

Safety class II: this product is double insulated and therefore it does not have to be connected to an earthed socket.

Protect connection(s) from direct exposure to rain, water or other liquids. Do not connect this product while it is still in the package, and do not connect multiple lightchains to each other.

Keep this product away from children, sharp edges, oil or heat.

More information

See the website help.calex.eu for more information on safety, warranty and disposal.

Installation

Please read the Safety Instructions first. Make sure before installing the device that it is not connected to the mains power supply. Ensure that the wires are not damaged during installation. Only reconnect to the mains once the installation is fully completed.


1. Determine the location where you want to hang the party lights, taking into account the position of the nearest power outlet.
2. Connect the cable with integrated controller to the power adapter on one side and to the party lights on the other side. Tighten the connector securely.
3. Make sure the adapter is connected correctly to the mains socket and test the party lights for proper operation by controlling them via the integrated controller or remote control.

Integrated controller functions

A. On/off button

1. Click once to turn on light.
2. Click again to change color mode.
3. Click twice to turn off the light.

B. Microphone

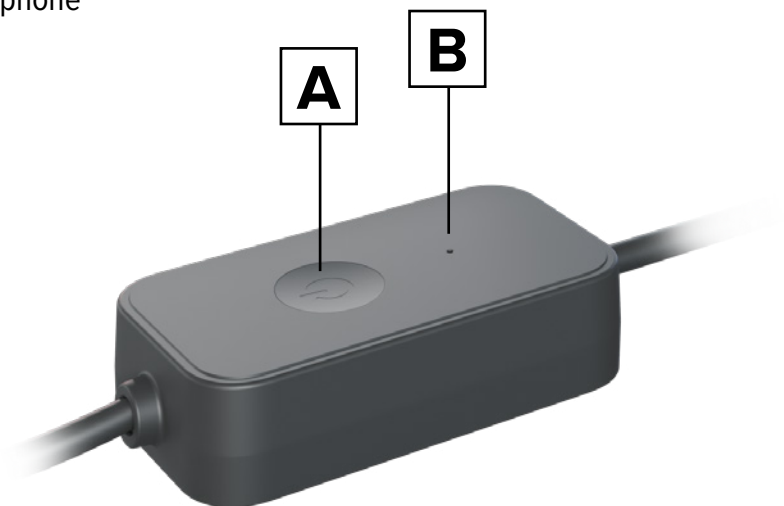

Remote control functions

Please remove the plastic tab before first use. Note that the remote is pre-paired by the factory. If the remote does not work immediately, hold the on/off button for 3 seconds (within 20 seconds after power on) to pair the remote. When the lights flash 3x in yellow color, this means the pairing was succesful. To unpair, hold the pause button for 3 seconds (within 20 seconds after power on) to unpair the remote. When the lights flash 3x in yellow color, this means the unpairing was succesful.

- C. ON/OFF (press to turn on/off the light)
- D. PAUSE (press to start/pause the dynamic light effect)
- E. MODE+ (press for next mode)
- F. MODE- (press for previous mode)
- G. SPEED+ (press to increase speed)
- H. SPEED- (press to decrease speed)
- I. AUTO MODE (press for random cycle)
- J. COLOR + (press for next color)
- K. COLOR - (press for previous color)
- L. BRIGHTNESS + (press to increase brightness)
- M. BRIGHTNESS - (press to decrease brightness)
- N. WHITE (press for white light)
- O. RED (press for red light)
- P. GREEN (press for green light)
- Q. BLUE (press for blue light)

